


Generic Quick Start Directions for Promethean Panels


How to Turn on the Board

- Press the Power Button on the Promethean Board

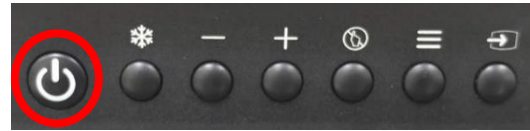

How to Switch to the Windows Side

- Touch the Computer Icon located on the Home Screen of the Promethean Panels

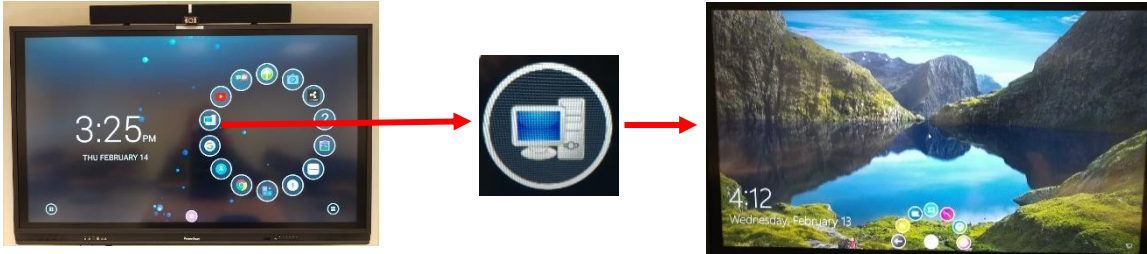

How to Switch to the Android Side

- Touch the Home Icon located on the Home Screen of the Promethean Panels



How to Turn on Sound Bar

- Press the Power Button on the Soundbar above the Promethean Panels
 - Red Light Means Off – Blue Light Means On
- If unable to reach the Soundbar you can lower the TV by using the Handles on the Side



How to use Promethean Toolbar

Press the Pink Menu Button and Seven Apps will be Appear.



1. **Back Button:** The Back button allows you to navigate back to the previous screen.
2. **Home:** The Home button allows you to quickly return to the home screen.
3. **Promethean Whiteboard App:** Turn your classroom display into a blank interactive canvas. Use the annotation tools to write or draw, insert images, and more.
4. **Screen Capture:** Instantly capture screenshots of anything displayed on your screen. Annotate directly onto the screenshot using the Promethean Whiteboard App and save if you wish.
5. **Promethean Annotate App:** Annotate over anything displayed on your screen quickly and easily.
6. **Promethean Timer App:** Launch up to four clocks, timers, or stopwatches simultaneously for classroom management.
7. **Promethean Spinner App:** Randomize elements of your classroom with ease. Choose from six default lists or create your own.

How to use Epson DC 21 Document Camera

- Raise the camera arm with one hand while holding the base of the camera with your other hand
 - Rotate the camera arm as shown & Position the camera head above the projection area.
- Turn on Document Camera (Press Power Button Twice to Power Off)
 - On the Computer Desktop Select the Easy Interactive Tools Icon and Select Document Camera

